




Gate Lock Parts

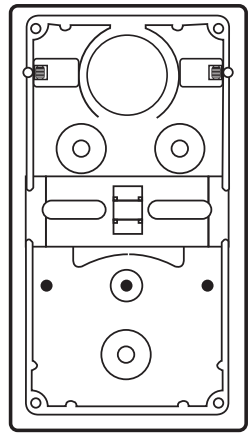


W3703
Case

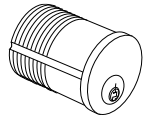

 
2122
Cylinder



W2108
Cylinder set screw

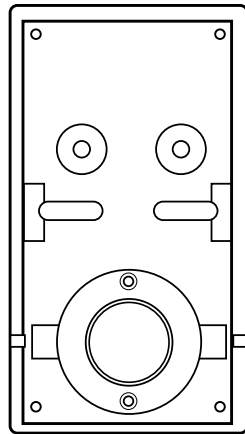


W3701
Cover

 


W3708
Turnpiece



 
W3751
Double cylinder
collar with set
screws




WA3806 to W3836
Hook assembly

 

WA3715 to WA3745
Latch assembly

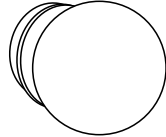

WA9253
Interior knob assembly

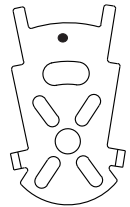


W3704
Fork



W3705
Latch lever




WA3706
Latch adapter

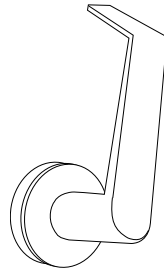


WA9293
Interior lever assembly
Use with W3791 or W3891



W3711
Fork spring

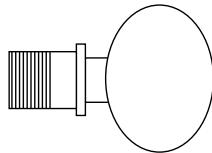


WA9251
Exterior knob

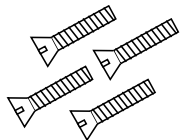


9005
Case screws



 1083
Retainer/Fork Screw



W3791 - Lever stop plate (Latch)

 


W3891 - Lever stop plate (Hook)




W3892 - Lever slide cover

Reversible Gate Lock Installation Instructions®

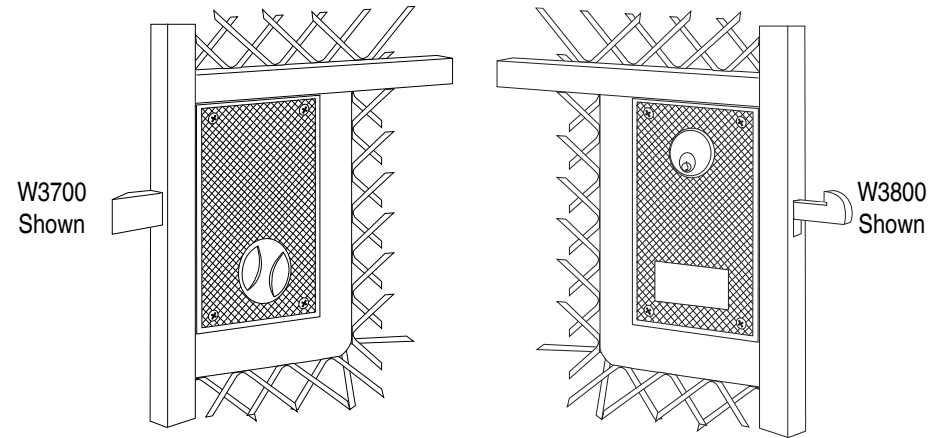

US PATENT #4,875,725 "NO FALL OUT" FEATURE.

Parts will not fall out when cover is removed. Replaces Multilock Gate Locks.

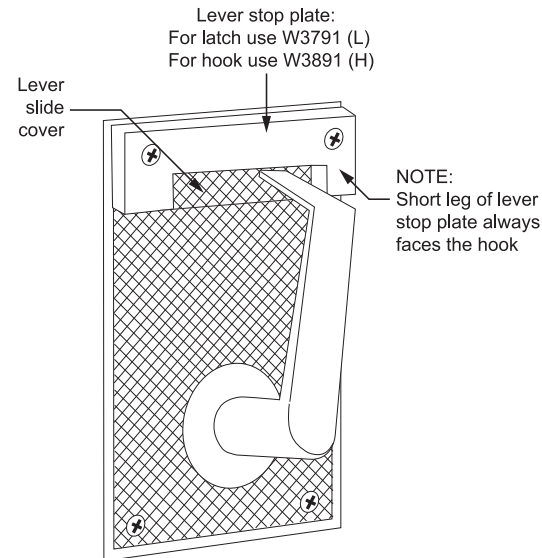


To Install Interior Lever:

1. Place spring over post and engage fork as shown in "how to assemble" section on page 3.
2. Attach lever assembly in cover and fasten with two screws.
3. Assemble case in lock frame and attach interior lever-cover assembly.
4. Attach plastic lever slide cover and lever stop plate with top two screws. Use plate marked "L" for latches or plate marked "H" for hooks.

How to Install Single & Double Cylinder Models

Figure 1

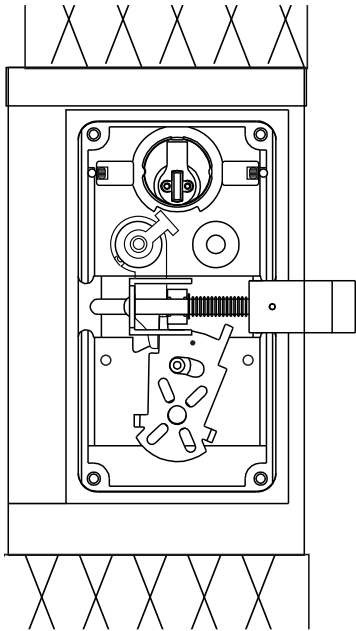

How To Install:

Insert assembled case from outside into lock frame of gate (see figure 1).

Single Cylinder Models:

1. From inside, place cover over case.
2. Engage thumbpiece tabs with slots in fork (see figure 2).
3. Test thumb turn operation. Insert and tighten case screws.

Double Cylinder Models:

1. Screw cylinder completely into double cylinder collar and tighten cylinder set screws from both sides.
2. Install cylinder collar assembly in cover and fasten with two screws. Cam should be in vertical position (see figure 3).
3. From inside, place cover over case. Tighten case screws.

Figure 2


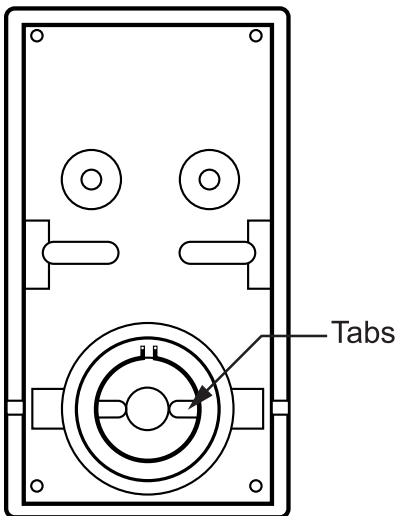



Figure 3

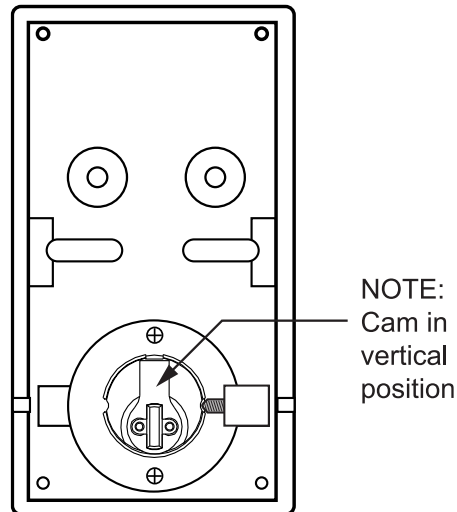

NOTE:
Cam in
vertical
position

How to Assemble Hook & Latch Gate Locks

SPECIAL FEATURE If assembled properly, all parts will remain in position when lock is inverted.

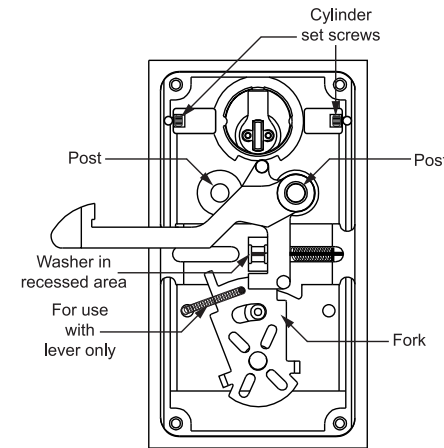

HOOK ASSEMBLY:

1. Insert cylinder completely into case. With cam in vertical position, tighten cylinder set screws from both sides.
2. While compressing spring on hook assembly, place over either post for left or right handing.
3. Washer fits in the recess of the cradle when the spring is released. Position the fork as shown so that its movement retracts hook.

To Reverse:

Compress spring on hook assembly and lift out. Re-insert on opposite post.

LATCH ASSEMBLY:

1. Insert cylinder completely into case. With cam in vertical position, tighten cylinder set screws from both sides.
2. Engage latch lever with pin on latch adapter and place over either post.

NOTE:

Notched end of latch lever must be on outside leg of fork. Retract washer on latch rod to compress spring. Place latch assembly with washer in recessed pocket so end of latch stop overlaps edge of latch lever. Make sure latch nose faces desired direction for swinging door.

To Reverse:

Compress spring on latch assembly and lift out. Re-position latch lever and latch adapter on opposite post. Re-insert latch in opposite direction.

