



Uni-Lock™ System & Ornamental Iron Installation Instructions®


Series 21 Unilock™

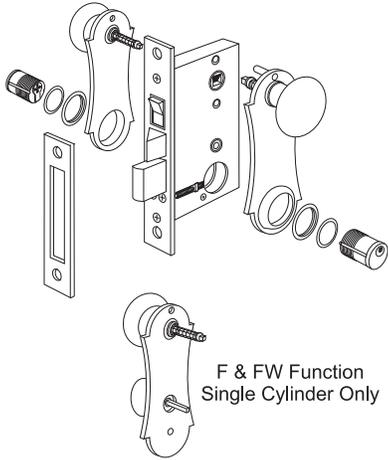


Series 9215 Unilock™

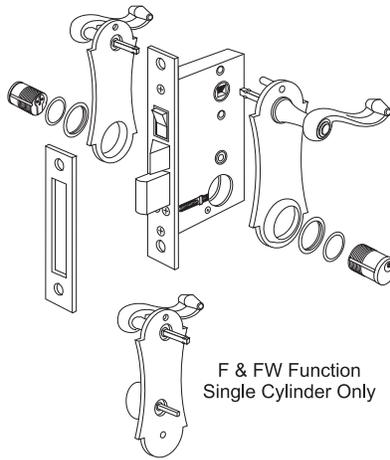


Series 9257 Unilock™

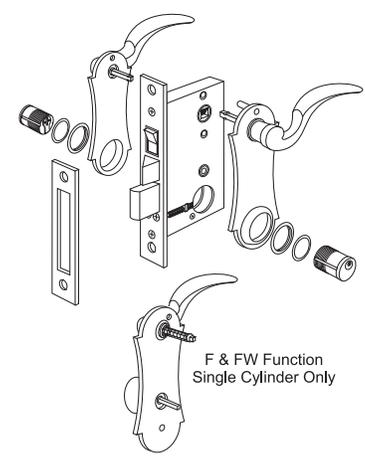


Series 22 Ornamental Iron

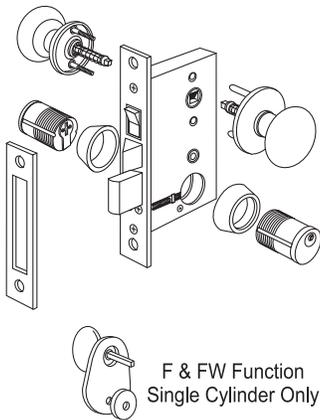

Series 9225 Ornamental Iron

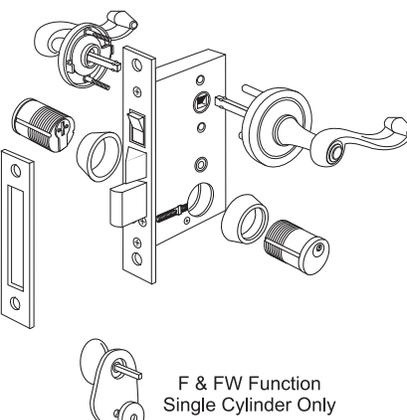

Series 9267 Ornamental Iron

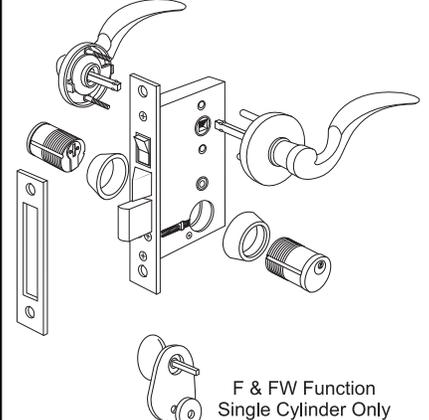


1. Position knob/plate or knob/rose assemblies on each side of door as shown. Make sure spindles from both sides are engaged with lock properly. Loosely tighten mounting screws.
2. Place rings/spacers over cylinder and screw in both cylinders firmly, making sure the key slot is aligned vertically toward the knob/lever.
3. Tighten both cylinder set screws and check lock with key for proper operation.
4. Tighten mounting screws securely and check lock for proper operation before closing the door.




UNI-LOCK™ Knob/Plate Dummy Trim:

1. Position knob plate assembly on each side of door as shown. Loosely tighten mounting screws.
2. Place inside and outside dummy cylinders with rings and tighten securely with 1/4"-20 flat head machine screw.
3. Tighten mounting screws securely and check lock for proper operation before closing the door.


DUMMY TRIM KNOB SET

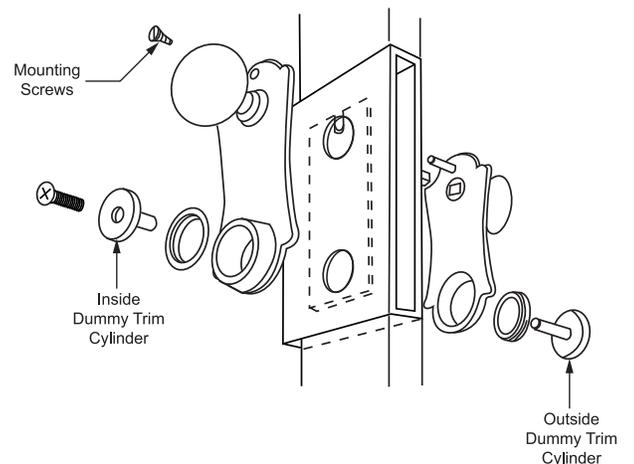

To Reverse Handing

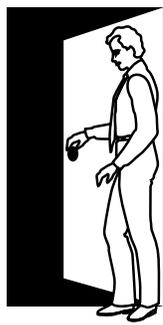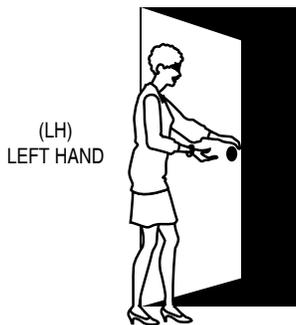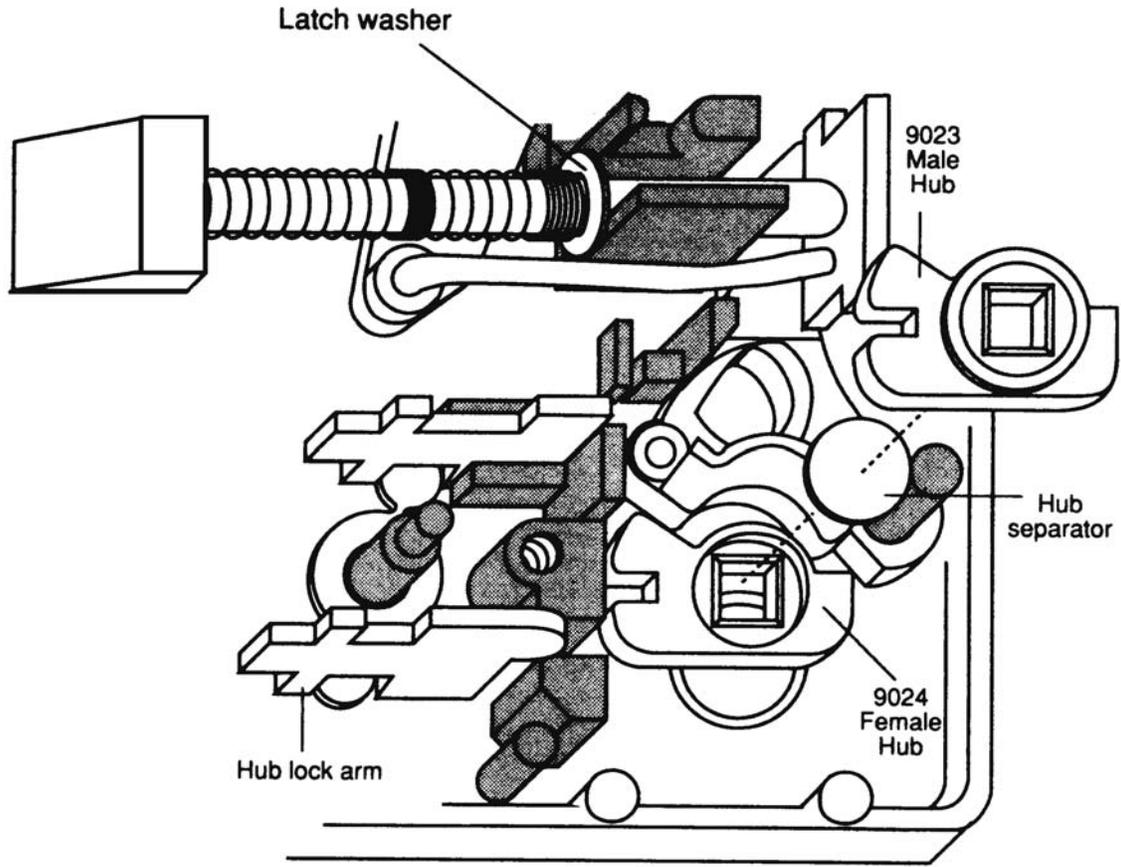

OUTSIDE

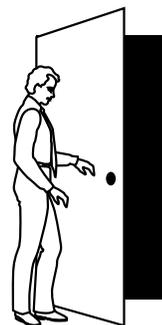

OUTSIDE

Left Hand to Right Hand; Left Hand Reverse to Right Hand Reverse:

1. Remove lock body cover (3 screws).
2. Remove latch, turn over and re-insert. **Note position of latch washer.**
3. Remove hub lock arm, turn over and re-insert.
4. Replace cover and re-fasten.

Left Hand to Left Hand Reverse; Right Hand to Right Hand Reverse:

1. Remove lock body cover (3 screws).
2. Remove latch, turn over and re-insert. **Note position of latch washer.**
3. Replace cover and re-fasten.

WARNING:
Double Cylinder Locksets - Do not leave key in inside cylinder. This could result in a lockout.